

Handling & Safety
READ BEFORE USE

Dolium®




MADE IN BELGIUM



HANDLE WITH CARE

HANDLE WITH CARE

If you are not familiar with Dolium® one-way kegs or tapping equipment, consult your retailer or local distributor for the 'Handling & safety instructions' also found at QR code above.

This keg will rupture and may cause injury if overpressurized with compressed air, N, or CO₂. Tapping system and pressure regulator should be equipped with a pressure relief (blow-off) device.



CO₂ HAZARD!

Read CO₂ handling instructions available at your CO₂ supplier. Danger of suffocation.



STORAGE

0°C < T° < 35°C
(32°F) (95°F)




PRESSURE IN USE

P work < 3,5 BAR
(50 PSI)



AFTER USE
0 BAR (0 PSI)

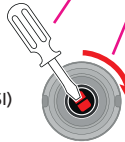

RELEASE PRESSURE

after use to 0 bar (0 PSI) to recycle in a well vented area, by turning the pressure Relief Valve (red) a **quarter turn**.

KEEP AWAY FROM

children



direct sun and heat sources



cleaning products



DO NOT
tamper, pierce or expose to sharp objects



The DOLIUM® KEGS are for PROFESSIONAL PURPOSES ONLY and are NOT TO BE REUSED for any other 2nd life purpose, not even when emptied and / or depressurized.

www.dolium.eu

HANDLE WITH CARE